


Installation Instruction Sheet

L195 (BACK MOUNT), L196/LD196 (CEILING MOUNT) & L198/LD198 (END MOUNT) SERIES

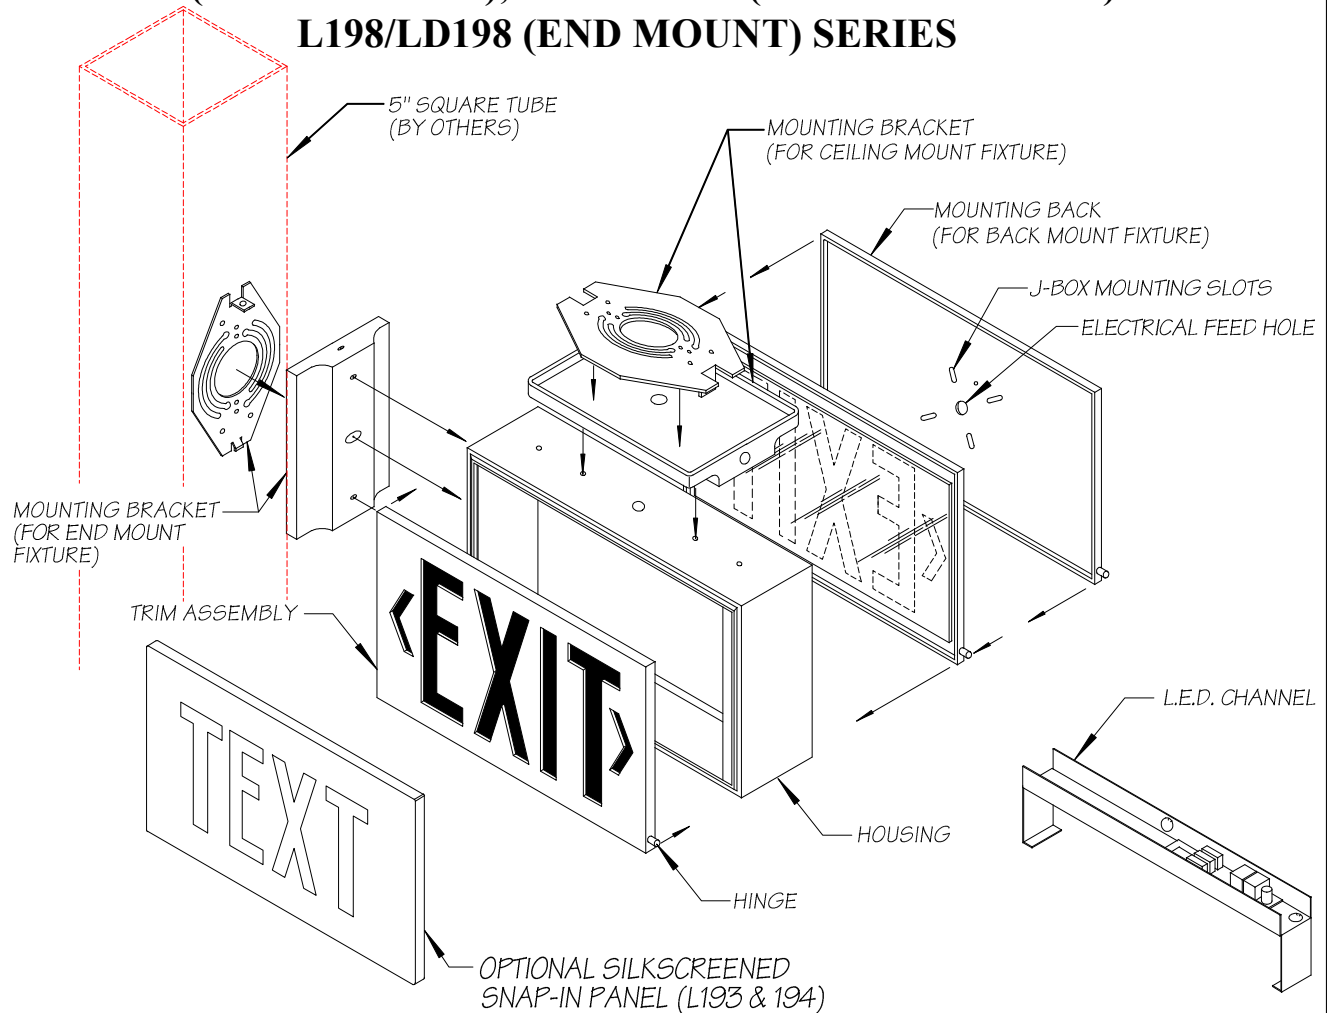

Step 1

Turn Off Electrical Power to Fixture. Remove trim assembly. Bring supply wire through desired entrance. Using mounting holes on housing back, or side / top bracket (depending on mtg. option ordered) attach directly to j-box.

- Caulk perimeter of mounting bracket to ensure proper seal to wall/ceiling for wet location ceiling & end mount fixtures with "W" suffixed
- Caulk perimeter of mounting back to ensure proper seal to wall for wet location back mount fixtures with "W" suffixed

Step 2

Splice supply wires with lead wires of wired channel. Replace wire channel and fasten in place. Mount finished trim to housing using factory supplied stainless steel 6-32 x 3/4" screw

NOTE:

"THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED".

COLE
Lighting